

How to configure Interglogix cameras for use with OnGuard and Lenel NVR

Last Modified on 10/06/2022 4:14 am EDT

In order to ensure that OnGuard and Lenel NVR properly communicate with Interlogix cameras, follow the steps below.

Procedure Steps

1. On the camera or encoder webpage, navigate to **Configuration > Image**.
2. Change the profile to use the **Basic (Base) Profile**.
3. Change the **I-Frame** interval to match the FPS.
4. Confirm the bitrate is set to a value that is realistic.

Applies To

LNVR (All versions); OnGuard (All versions)

Additional Information
