

# How to enable audio on a Hybrid recorder?

Last Modified on 10/06/2022 4:14 am EDT

Enabling audio on a Hybrid recorder

## Procedure Steps

To enable the audio:

1. On the recorder, go to **C:\Program Files\Common Files\Lenel\LnrHikvisionCapSrc.config**.  
**Note:** On a 64-bit system, the path is **C:\Program Files(x86)\Common Files\Lenel\LnrHikvisionCapSrc.config**.
2. Find: **<EnableAudio>>false</EnableAudio>**.
3. Change to: **<EnableAudio>>true</EnableAudio>**.

## Applies To

OnGuard (All Versions), HVR (All Versions)

## Additional Information

---