

# How should the modem status LEDs appear for both host and panel modems?

Last Modified on 10/06/2022 4:15 am EDT

## Question

How should the modem status LEDs appear for both host and panel modems?

## Answer

Status LEDs for both U.S. Robotics and SECURCOMM DC336 modems are indicated below. Information for both the host and panel-end modems is listed for each possible state with descriptions.

### **U.S. Robotics**

AA - Auto Answer  
CD - Carrier Detect  
RD - Receive Data  
SD - Send Data  
TR - Terminal Ready  
CS - Clear to Send  
ARQ/FAX - Error Control

#### **DISCONNECTED STATE (COMMUNICATION SERVER OFF):**

HOST: CS  
PANEL: TR, CS

#### **DISCONNECTED STATE (COMMUNICATION SERVER ON):**

HOST: TR, CS  
PANEL: TR, CS

#### **DIALING / RINGING STATE:**

HOST: TR, CS  
PANEL: AA (Flashes on Ring), TR, CS

#### **ANSWERING / CONNECTING STATE:**

HOST: TR, CS  
PANEL: AA, TR, CS

#### **CONNECTED STATE:**

HOST: AA, CD, RD (Flashing), SD (Flashing), TR, CS  
PANEL: AA, CD, RD (Flashing), SD (Flashing), TR, CS

### **SECURCOMM DC336**

MR - Modem Ready

TR - Terminal Ready  
SD - Send Data  
RD - Receive Data  
OH - Off Hook  
CD - Carrier Detect  
AA - Auto Answer  
HS - High Speed

**DISCONNECTED STATE (COMMUNICATION SERVER OFF):**

HOST: MR, HS  
PANEL: MR, TR, HS

**DISCONNECTED STATE (COMMUNICATION SERVER ON):**

HOST: MR, TR, HS  
PANEL: MR, TR, HS

**DIALING / RINGING STATE:**

HOST: MR, TR, OH, HS  
PANEL: MR, AA (Flashes on Ring), HS

**ANSWERING / CONNECTING STATE:**

HOST: MR, TR, OH, HS  
PANEL: MR, TR, OH, HS

**CONNECTED STATE:**

HOST: MR, TR, SD (Flashing), RD (Flashing), OH, CD, HS  
PANEL: MR, TR, SD (Flashing), RD (Flashing), OH, CD, HS

## Applies To

OnGuard (All versions)

## Additional Information

None