

Strike Field States Cutoff on Close

Last Modified on 10/06/2022 4:15 am EDT

Problem Overview

Strike Field States Cutoff on Close

Detailed Description

For HID Edge devices, the **Strike** field states Cutoff on close. The actual reader strike output will cutoff on open in all cases.

Applies To

OnGuard (All Versions)

Additional Information

None
