

How to replace the ribbon cartridge in Nisca PR5300-series printers

Last Modified on 10/06/2022 4:15 am EDT

How to replace the ribbon cartridge in Nisca PR5300 series printers

Procedure Steps

- 1) Turn the printer on and make sure the front service door is closed.
- 2) Press the "Ribbon Change/Menu" button. You will hear the print head being retracted.
- 3) Open the front service door of the printer. Flip up the green lever on the upper left hand side.
- 4) Slide the black ribbon cassette unit out of the printer with slow even force.
- 5) Replace with the new cartridge or refill the existing cartridge with new NiSCA approved ribbon.
- 6) Slide the ribbon cassette back into position
- 7) Flip the green lever back into the locked position and close the service door.

Follow LCD menu screen to continue printing.

Applies To

Nisca badge printers

Additional Information

None
