

How do I exit Engineer Mode on the Guardall PX QX RX LCD Keypad?

Last Modified on 10/06/2022 4:15 am EDT

Question

How do I exit Engineer Mode on the Guardall PX QX RX LCD Keypad?

Answer

To exit Engineering mode, select '05=Eng' on the keypad, which will then return the Keypad to Time & Date display.

Applies To

Guardall PX QX RX Control Panels and Accessories

Additional Information
