

NGP OnBoard reader and I/O's yellow X

Last Modified on 10/06/2022 4:15 am EDT

Symptom

Cycling power will not restore OnBoard device and you have a solid yellow and red led light on the I/O Module of the NGP main panel.

Resolution

Your NGP Main I/O board is bad and has failed to start processing.

Applies To

OnGuard (All Versions)

Additional Information
