

# How do I log out of the Guardall PX/QX/RX LCD Keypad?

Last Modified on 10/06/2022 4:15 am EDT

## Question

How do I log out of the Guardall PX/QX/RX LCD Keypad?

## Answer

To log out of the LCD Keypad, press the X key followed by the "confirm" or check mark key.

## Applies To

Guardall PX/QX/RX Control Panels

## Additional Information

None

---