


How to configure timed area anti passback in NGP

Last Modified on 10/06/2022 4:15 am EDT

Timed Anti-passback in NGP

Procedure Steps

1. Go to system admin > access control > areas
2. Select NGP default area
3. To the right under general:
4. Check strict entry/exit enforcement
5. Check ignore outside to inside area check (if you are not using egress reader)
6. Select the needed time for Auto reset drop down menu
7. Click ok

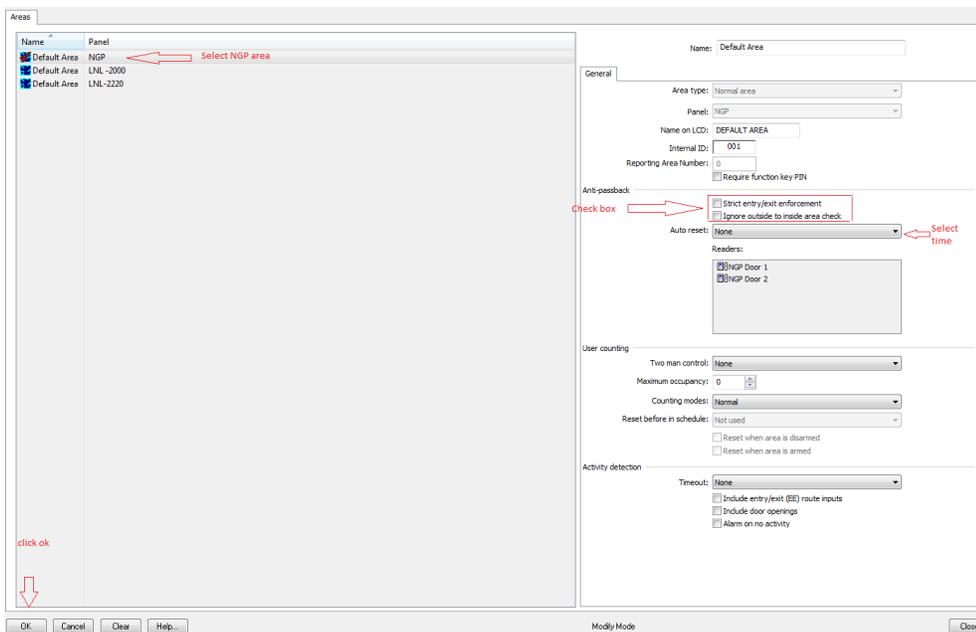

Applies To

OnGuard (all versions)

Additional Information

None

