

# How to configure an OnGuard workstation for a Lenel ILS Mobile Configurator

Last Modified on 10/06/2022 4:16 am EDT

How to configure an OnGuard workstation for a Lenel ILS Mobile Configurator

## Procedure Steps

### **Prerequisites:**

- The OnGuard workstation is running Microsoft Windows XP or later, with an available USB port.
- The OnGuard workstation has the Communication Server service installed.

If the workstation is running Microsoft Windows XP or Windows Server 2003, complete steps 1 - 4:

- 1) Download and install Microsoft ActiveSync 4.5 from [microsoft.com](http://microsoft.com)
- 2) In System Administration, create and configure the ILS Offline panel.
- 3) Stop the LS Communication Server service if it is running.
- 4) Start the Communication Server application.

If the workstation is running Microsoft Windows Vista, Windows 7 or Windows Server 2008, complete steps 5 - 7:

- 5) Download and install Windows Mobile Device Center 6.1 from [microsoft.com](http://microsoft.com)
- 6) From System Administration, add and configure the ILS Offline panel.
- 7) Ensure the Communication Server is running, either as a service or an application.

## Applies To

OnGuard 2010 (6.4.500) or later  
Lenel ILS

## Additional Information

None

