

"Do not activate strike on REX" setting does not work for reader associated with NGP panel

Last Modified on 10/06/2022 4:16 am EDT

Symptom

The **Do not activate strike on REX** setting (located on the Settings form in the Readers and Doors folder in the System Administration application) does not work for a reader associated with an NGP panel.

Resolution

1. Start and log into System Administration.
2. From the **Access Control** menu, select **Readers and Doors**.
3. Select the reader you wish to configure that is associated with the NGP panel.
4. Click the Settings tab.
5. Click [Modify].
6. Select the **Main panel controls request to exit processing instead of door controller** check box.
7. Click [OK].

Applies To

OnGuard (All Versions)
NGP

Additional Information

None
