

Alarm Shunt does not function when Do Not Activate Strike on REX is enabled.

Last Modified on 10/06/2022 4:16 am EDT

Symptom

When the **Do Not Activate Strike on REX** option is enabled, the **Alarm Shunt** feature does not work.

Resolution

This is normal behavior. The shunt relay only works if the strike actually fires.

The shunt is triggered by the command to fire the strike relay, so if the strike never fires, there is no way for the shunt relay to go active.

Applies To

OnGuard (All versions)

Additional Information
