

Configuring "Snow Day" Setup

Last Modified on 10/06/2022 4:18 am EDT

Configuring "Snow Day" Setup

Procedure Steps

"Snow Day" means that if a door is scheduled to be unlocked for a time schedule, the door won't actually unlock until the first credential is presented instead of the beginning of the time schedule itself. To configure Snow Day:

1. Select the Functions Schedule tab in the Reader form.
2. Check the "Disable Auto Unlock" checkbox.
3. Click [Save].

Applies To

FCWnx

Additional Information
