

# Strike Follower feature in OnGuard 2010

Last Modified on 10/06/2022 4:19 am EDT

## Product Name

Strike Follower feature in OnGuard 2010

## General Information

When using the Strike Follower feature, Reader AUX Output 1 is used by the panel automatically. This prevents the Pre-alarm, Local I/O, and Global I/O from using AUX Output 1 for that reader.

The Strike Follower feature prevents the ACS.INI reader input/output mapping from working. This functionality is configured under the [ReaderInputOutputMapping] section in ACS.INI file. These settings are enabled by setting **ReaderInputOutputMappingMode** to **1** and also setting the various reader input and output settings (such as **ReaderOutputAux1**) to the corresponding desired output.

When the Strike Follower feature is enabled, Reader AUX Output 1 is always used. The settings in the ACS.INI file are ignored.

## Applies To

OnGuard 2010 (6.4.500) or later

## Additional Information

None

---